

Servicing your FTO

Here are some details on how and when to service your FTO. You can do it yourself, or be lazy and give it to a garage.

Service Intervals

12 months or 10,000 miles Service A
 24 months or 20,000 miles Service B
 36 months or 30,000 miles Service A
 48 months or 40,000 miles Service C
 60 months or 60,000 miles Service A
 72 months or 70,000 miles Service B
 84 months or 80,000 miles Service A
 96 months or 90,000 miles Service C
 108 months or 100,000 mile Service A
 120 months or 110,000 miles Service B
 etc...

Service A	Service B	Service C
Lubrication (Check / Replace / Clean)	Lubrication (Check / Replace / Clean)	Lubrication (Check / Replace / Clean)
Engine oil & filter	Engine oil & filter	Engine oil & filter
Battery terminals	Battery terminals	Battery terminals
Drive line oil levels	Drive line oil levels	Drive line oil levels
Tyre Pressure	Tyre Pressure	Tyre Pressure
Radiator coolant	Radiator coolant	Radiator coolant
Power Steering, brake, clutch, washer fluid	Power Steering, brake, clutch, washer fluid	Power Steering, brake, clutch, washer fluid
Door water drain holes	Door water drain holes	Door water drain holes
	Transmission oil levels	Transmission oil levels
Engine Bay (Check)		
	Engine Bay (Check)	Engine Bay (Check)
Brake/clutch master cylinder		
Steering	Brake/clutch master cylinder	Brake/clutch master cylinder
External drive belts	Steering	Steering
Battery	External drive belts	External drive belts
Engine coolant level	Battery	Battery
Brake, fuel, power steering and other pipe work	Engine coolant level	Engine coolant level
Transmission oil	Brake, fuel, power steering and other pipe work	Brake, fuel, power steering and other pipe work
Radiator hoses	Transmission oil	Transmission oil
Washer bottle	Radiator hoses	Radiator hoses
	Washer bottle	Washer bottle
Under Body (Check)		
	Under Body (Check)	Under Body (Check)
Steering linkage inc. seals & boots		
Suspension ball joints and dust covers	Steering linkage inc. seals & boots	Steering linkage inc. seals & boots
Suspension system	Suspension ball joints and dust covers	Suspension ball joints and dust covers
Tyre wear alignment	Suspension system	Suspension system
Brake, fuel, power steering and other pipe work	Tyre wear alignment	Tyre wear inc. alignment
Exhaust pipe system and linkage	Brake, fuel, power steering and other pipe work	Brake, fuel, power steering and other pipe work
	Exhaust pipe system and linkage	Exhaust pipe system and linkage
Brake (Check/Replace)		
	Brake (Check/Replace)	Engine Tuning
Pads and brake disks		Adjust Valve clearance
Road Test & Chassis	Pads and brake disks	Renew Spark plugs
Operation of equipment	Road Test & Chassis	Check Vacuum advance & External drive belts
Engine Performance	Operation of equipment	
Gearshift and drive line performance	Engine Performance	Brake (Check/Replace)
	Gearshift and drive line	

Service and handbrake
performance
Suspension

performance
Service and handbrake
performance
Suspension

Air Conditioning (Check)

Performance
Ensure evaporator drain hose
is not blocked
Clear dirt/debris from
condenser

Pads and brake disks
Road Test & Chassis
Operation of equipment
Engine Performance
Gearshift and drive line
performance
Service and handbrake
performance
Suspension

Air Conditioning (Check)

Performance
Ensure evaporator drain hose
is not blocked
Clear dirt/debris from
condenser

Additional Information

Every 40,000 km - Change transmission oil/fluid & auto transmission filter
Every 100,000 km - Flush and then replace engine coolant.
Every 24 months - Replace brake fluid.
